

PRODUCT BULLETIN – REPLACING MOUNTING WASHER



This bulletin covers the procedure for replacing mounting washers on brake chambers installed on vehicles.

1. Always block vehicle wheels when working on brake actuators to prevent vehicle rollaway.
2. Prior to removing or installing washers, insure the spring brake is caged.
3. Remove nut and washer from top side of bracket only.
4. Replace nut and washer on top side with new nut and washer supplied.
5. Torque nut to 133-155 ft-lbs. (180-210 Nm).
6. Remove nut and washer from bottom side of bracket only.
7. Replace nut and washer on bottom side with new nut and washer supplied.
8. Torque nut to 133-155 ft-lbs. (180-210 Nm).

Step 3



Step 4



Step 5



TSE Brakes, Inc. • 2310 Industrial Drive S.W. • Cullman, AL, 35055 • USA
AFM phone: 256-736-6288 • OEM phone: 256-736-6280
Email: customer.service@tsebrakes.com • Website: www.tsebrakes.com

TSB# 2019-001 Jan. 3, 2019